

XT-1000

## XT-1000

Product Specification  
and  
OEM Manual

BLANK

**MAXTOR**

**XT - 1000**

**PRODUCT SPECIFICATION**

**&**

**OEM MANUAL**

**MAXTOR CORPORATION  
150 River Oaks Parkway  
San Jose, CA 95134**

XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

REVISION RECORD		
Revision	Date Published	Description of Changes
A	03/06/83	Initial Release
B	11/13/83	Clarification and Minor Changes
C	02/10/84	Minor Changes
D	05/07/84	Clarification and Minor Changes
E	08/10/84	Environmental Specification Clarification; Minor Corrections
F	10/10/84	Addition of XT-1085 Specifications
G	01/31/85	Series Code 02 Inclusion Defect Map Information
H	09/09/85	Minor Corrections, Additions
Document Part No.: 1011001		

Address comments concerning this manual to:

MAXTOR CORPORATION  
150 River Oaks Parkway  
San Jose, California 95134  
Telephone: (408) 942-1700  
Telex: 171074  
FAX: (408) 433-0457

The contents of this manual may  
be revised without prior notice.

© Copyright 1985 by Maxtor Incorporated

Part 101101 Rev H

MAXTOR CORPORATION

# XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

## TABLE OF CONTENTS

SECTION	PAGE
1.0	INTRODUCTION ..... 1
1.1	General Description ..... 1
1.2	Specification Summary ..... 3
1.2.1	Physical Specifications ..... 3
1.2.2	Performance Specifications ..... 4
1.2.3	Functional Specifications ..... 4
1.2.4	Reliability Specifications ..... 5
1.2.5	Error Rates..... 5
2.0	FUNCTIONAL CHARACTERISTICS ..... 6
2.1	General Theory of Operation ..... 6
2.2	Read/Write and Control Electronics ..... 6
2.3	Drive Mechanism ..... 7
2.4	Air Filtration System ..... 7
2.5	Positioning Mechanism ..... 8
2.6	Read/Write Heads and Disks ..... 9
2.7	Cooling Requirements ..... 9
3.0	FUNCTIONAL OPERATIONS ..... 10
3.1	Power-up Sequencing ..... 10
3.2	Drive Selection ..... 10
3.3	Track Accessing ..... 11
3.4	Head Selection ..... 12
3.5	Read Operation ..... 12
3.6	Write Operation ..... 12
4.0	ELECTRICAL INTERFACE ..... 12
4.1	Control Input Lines ..... 16
4.1.1	Reduced Write Current ..... 16
4.1.2	Write Gate ..... 17
4.1.3	Head Select 2 <sup>0</sup> , 2 <sup>1</sup> , 2 <sup>2</sup> , 2 <sup>3</sup> ..... 17
4.1.4	Direction In ..... 17
4.1.5	Step ..... 17
4.1.6	Buffered Seek ..... 18
4.1.7	Drive Select ..... 19

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

<u>SECTION</u>	<u>PAGE</u>
4.2	Control Output Lines ..... 19
4.2.1	Seek Complete ..... 19
4.2.2	Track 0 ..... 20
4.2.3	Write Fault ..... 20
4.2.4	Index ..... 20
4.2.5	Ready ..... 21
4.3	Data Transfer Lines ..... 21
4.3.1	MFM Write Data ..... 22
4.3.2	MFM Read Data ..... 22
4.3.3	Read/Write Timing..... 22
4.4	Drive Selected ..... 23
4.5	General Timing Requirements ..... 23
5.0	PHYSICAL INTERFACE ..... 24
5.1	J1/P1 Connector - Control Signals ..... 25
5.2	J2/P2 Connector - Data Signals ..... 25
5.3	J3/P3 Connector - DC Power ..... 26
5.4	J4/P4 Frame Ground Connector ..... 26
6.0	PHYSICAL SPECIFICATIONS ..... 27
6.1	Mounting Orientation ..... 27
6.2	Mounting Holes ..... 27
6.3	Physical Dimensions ..... 27
6.4	Shipping Requirements ..... 27
7.0	MEDIA DEFECTS AND ERRORS ..... 30
7.1	Defect Map Format ..... 31
8.0	XT-1000 DRIVE ADDRESS SELECTION JUMPER ..... 33

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

<u>SECTION</u>	<u>PAGE</u>
9.0	APPENDIX ..... 34
9.1	Track Format ..... 34
9.2	ST506/412 Format ..... 34
9.3	XT-1000 Alternate Track Format ..... 35
9.4	Address Marks ..... 36
9.5	Gap Length Calculations ..... 37
9.5.1	Gap 1 ..... 37
9.5.2	Gap 2 ..... 37
9.5.3	Gap 3 ..... 37
9.5.4	Gap 4 ..... 37
9.6	Sector Interleaving ..... 38
9.7	Unpacking and Inspection ..... 38
9.8	Installation ..... 38

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### FIGURES

Figure		Page
1	XT-1000 Air Filtration System .....	7
2	XT-1000 Head Positioning .....	8
3	Power-up sequencing .....	10
4	J1/P1 Connector Pin Assignments .....	13
5	J2/P2 Connector Pin Assignments .....	14
6	Typical Connection, 4 Drive System .....	15
7	Control Signals Driver/Receiver Combination .....	16
8A	Step Pulse Timing .....	18
8B	General Step Timing .....	18
9	Index Timing .....	20
10	Data Line Driver/Receiver combination .....	21
11	Read/Write Data Timing .....	22
12	General Timing Requirements .....	23
13	Interface Connector Physical Location .....	24
14	J1 Connector Dimensions .....	25
15	J2 Connector Dimensions .....	25
16	J3 Connector .....	26
17	Motor Start Current Requirements .....	26
18	Mechanical Outline and Mounting Hole Location .....	28
19	Mechanical Outline - Bottom and Side Views .....	29
20	Defect Map Format .....	32
21	Drive Select Jumper Options .....	33
22	ST506/412 Format .....	34
23	XT-1000 Alternate Track Format.....	35
24	"A1" Address Mark Byte .....	36



# XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

## TABLES

<u>Tables</u>	<u>Page</u>
1     Seek Performance vs Step Time .....	11
2     Control Signals .....	13
3     Data Signals .....	14
4     DC Power Requirements .....	26
5     Drive Select Jumper Options .....	33

BLANK

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 1.0 INTRODUCTION

#### 1.1 General Description

The XT-1000<sup>TM</sup> disk drives are low cost, high capacity, high performance random access storage devices utilizing from 4 to 8 non-removable 5 1/4-inch disks as storage media. Each disk surface employs one moveable head to access up to 1024 data tracks. The total unformatted capacity of the disk drives range from 66.93 to 143.43 MB.

Low cost and high performance are achieved through the use of a rotary voice coil actuator and a closed loop servo system utilizing a dedicated servo surface. The innovative MAXTORQ<sup>TM</sup> rotary voice coil actuator provides an average access time of better than 30 msec and a track-to-track access time of less than 5 msec; performance usually achieved only with larger sized, higher powered linear actuators. The closed loop servo system and dedicated servo surface combine to allow state-of-the-art recording densities (1000 tpi, up to 9,934 bpi) in a 5 1/4-inch package.

High capacity is achieved by a balanced combination of high areal density and high density packaging techniques. Maxtor's advanced MAXPAK<sup>TM</sup> electronic packaging techniques utilize miniature surface mount devices to allow all electronic circuitry to fit on one printed circuit board. Advanced 3380 Whitney type head flexures and sliders allow closer spacing of disks and therefore allow a higher number of disks in a 5 1/4-inch package. Maxtor's unique integrated drive motor/spindle design allows a deeper deck casting than conventional designs, thus permitting more disks to be used.

The XT-1000 electrical interface is compatible with the industry standard ST506/412 family of 5 1/4-inch fixed disk drives. The XT-1000 size and mounting are also identical to the industry standard 5 1/4-inch minifloppy and winchester disk drives, and they use the same DC voltages and connectors. No AC power is required.

#### Key Features:

- \* Storage capacity of 66.93 to 143.43 megabytes unformatted (52.69 to 112.8 megabytes formatted with a ST506/412 compatible format).
- \* Same physical size and mounting as standard minifloppy disk drives.
- \* Same DC voltages as standard minifloppy disk drives.
- \* No AC voltage required.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

- \* Rotary voice coil and closed loop servo system for fast, accurate head positioning.
- \* Microprocessor controlled servo for fast access times, high reliability, and high density functional packaging.
- \* 5.0 megabit/second transfer rate.
- \* ST412 compatible interface.
- \* ST412 track capacity plus spare sector.
- \* Thin film metallic media for higher bit density and resolution plus improved durability.
- \* Single printed circuit board for improved reliability.
- \* Automatic actuator lock.
- \* Brushless DC spindle motor inside disk hub.
- \* Microprocessor controlled spindle motor for precision speed control ( $\pm 0.1\%$ ) under all load conditions.
- \* Dynamic braking during power-down cycle.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 1.2 SPECIFICATION SUMMARY

#### 1.2.1 Physical Specifications

##### Environmental Limits

##### Ambient Temperature

Operating: 50° to 113° F (10° to 45° C)

Non-Operating: -40° to 140° F (-40° to 60° C)

##### Max Temperature Gradient

Operating or Non-operating:

18° F/hr. (10° C/hr),

below condensation

Relative Humidity: 8 to 95% non-condensing

##### Maximum Elevation

Operating: 10,000 ft.

Non-Operating: -1000 ft. to 40,000 ft.

##### Shock (Inputs to the frame of drive)

Operating shock (all axes): 11 ms. pulsewidth (1/2 sine)...2G,  
10G with recal allowed

Non-operating shock (all axes): 11 ms. pulsewidth (1/2 sine)..20G

##### Vibration (Inputs to frame of drive)

Operating vibration (all axes)

5-25 hz, 0.006 inches P-P

25-500 hz, 0.20G peak acceleration

Non-operating vibration (all axes)

5-31 hz, 0.02 inches P-P

31-500 hz, 1G peak acceleration

##### DC Power Requirements

+12V  $\pm$  5%, 1.57A typical, 4.5A max. (at power on)

+5V  $\pm$  5%, 1.7A typical, 1.9A maximum

+5V Maximum Ripple = 50mV P-P

+12V Maximum Ripple = 120mV P-P

##### Mechanical Dimensions

Height ..... 3.25 inches

Width ..... 5.75 inches

Depth ..... 8.20 inches

Weight ..... 6.3 lbs (2.8kg)

Shipping Weight ..... 8.0 lbs (3.6kg)

##### Heat Dissipation

25 watts typical, 28 watts maximum

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 1.2.2 Performance Specifications      XT-1065   XT-1085   XT-1105   XT-1140

#### Capacity, unformatted

Per drive (Mbytes)	66.93	85.32	105.18	143.43
Per surface (Mbytes)	9.56	10.66	9.56	9.56
Per track (bytes)	10,416	10,416	10,416	10,416

#### Capacity, XT-1000 alternate format (per sect. 9.1.1)

Per drive (Mbytes)	54.2	69.2	85.3	116.3
Per surface (Mbytes)	7.75	8.65	7.75	7.75
Per track (bytes)	8448	8448	8448	8448
Per sector (bytes)	256	256	256	256
Sectors/track	33	33	33	33

#### Capacity, ST506/412 compatible format (per sect. 9.1.2)

Per drive (Mbytes)	52.6	67.1	82.7	112.8
Per surface (Mbytes)	7.52	8.39	7.52	7.52
Per track (bytes)	8192	8192	8192	8192
Per sector (bytes)	256	256	256	256
Sectors/track	32	32	32	32

#### Transfer rate, Mbits/sec

-----5.0-----

#### Access Time, msec, maximum

Average*	27	28	27	27
Track-to-track*	-----	4	-----	-----
Maximum*	43	46	43	43

\* Includes settling

### 1.2.3 Functional Specifications

Rotational Speed (rpm) **	-----	3600	-----	-----
Average latency (ms)	-----	8.33	-----	-----
Recording density (bpi)	-----	9875	-----	-----
Flux Density (fci)	-----	9875	-----	-----
Track density	-----	980	-----	-----
Cylinders	918	1024	918	918
Tracks	6426	8192	10,098	13,770
Sectors(33 sectors/track)	212,058	270,336	333,234	454,410
Data heads	7	8	11	15
Servo heads	1	1	1	1
Disks	4	5	6	8

\*\* Accurate to +0%, -0.2%

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 1.2.4 Reliability Specifications:

MTBF ..... 16,000 POH, typical usage  
PM ..... Not Required  
MTTR ..... 30 minutes  
Component Design Life ..... 5 years

### 1.2.5 Error Rates

Soft read errors .....10 per  $10^{11}$  bits read  
Hard read errors \* .....10 per  $10^{13}$  bits read  
Seek errors .....10 per  $10^7$  seeks

\* Not recoverable within 16 retries

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 2.0 FUNCTIONAL CHARACTERISTICS

#### 2.1 General Theory of Operation

The XT-1000 disk drive consists of read/write and control electronics, read/write heads, servo head, head positioning actuator, media, and air filtration system. The components perform the following functions:

1. Interpret and generate control signals.
2. Position the heads over the desired track.
3. Read and write data.
4. Provide a contamination free environment.

#### 2.2 Read/Write and Control Electronics

Drive Electronics are packaged on a single printed circuit board. This board, which includes two microprocessors, performs the following functions:

1. Reading/writing of data
2. Index detection
3. Head positioning
4. Head selection
5. Drive selection
6. Fault detection
7. Voice coil actuator drive circuitry.
8. Track 0 detection
9. Recalibration to track 0 on power-up
10. Track position counter
11. Power and speed control for spindle drive motor.
12. Braking for the spindle drive motor.
13. Drive up-to-speed indication circuit
14. Reduced write current on the inner tracks
15. Monitoring for write fault conditions
16. Control of all internal timing
17. Generation of seek complete signals




## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 2.3 Drive Mechanism

A brushless DC drive motor contained within the spindle hub rotates the spindle at 3600 rpm. The spindle is direct driven with no belt or pulleys being used. The motor and spindle are dynamically balanced to insure a low vibration level. Dynamic braking is used to quickly stop the spindle motor when power is removed. The head/disk assembly is shock mounted to minimize transmission of vibration through the chassis or frame.

### 2.4 Air Filtration System (Figure 1)

The disks and read/write heads are assembled in an ultra clean-air environment and then sealed within the module. The module contains an internal absolute filter mounted inside the casting to provide constant internal air filtration. A second filter, located on the enclosure top cover, permits pressure equalization between internal air and ambient air.

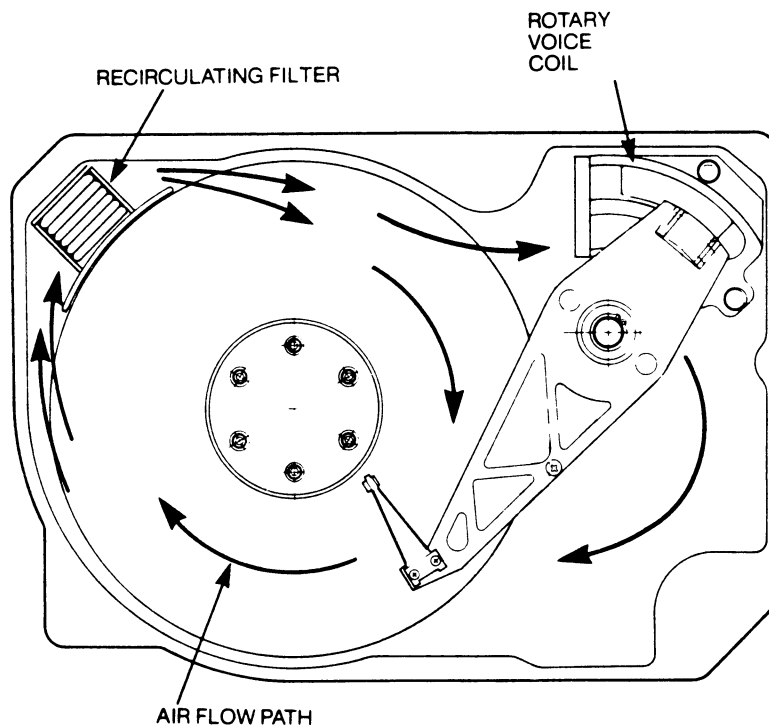


**FIGURE 1**  
**XT-1000 AIR FILTRATION SYSTEM**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 2.5 Positioning Mechanism (Figure 2)

The read/write heads are mounted on a head arm assembly which is then mounted to a ball-bearing supported shaft. The voice coil, an integral part of the head/arm assembly, lies inside the magnet housing when installed in the drive. Current from the power amplifier, controlled by the servo system, causes a magnetic field in the voice coil which either aids or opposes the field around the permanent magnets. This reaction causes the voice coil to move within the magnetic field. Since the head-arm assemblies are mounted to the voice coil, the voice coil movement is translated through the pivot point directly to the heads and achieves positioning over the desired cylinder.

Actuator movement is controlled by the servo feed-back signal from the servo head. The servo head is located on the lower surface of the bottom disk, where servo information is pre-written at the factory. This servo information is used as a control signal for the actuator to provide track-crossing signals during a seek operation, track-following signals during ON CYLINDER operation, and timing information such as index and servo clock.

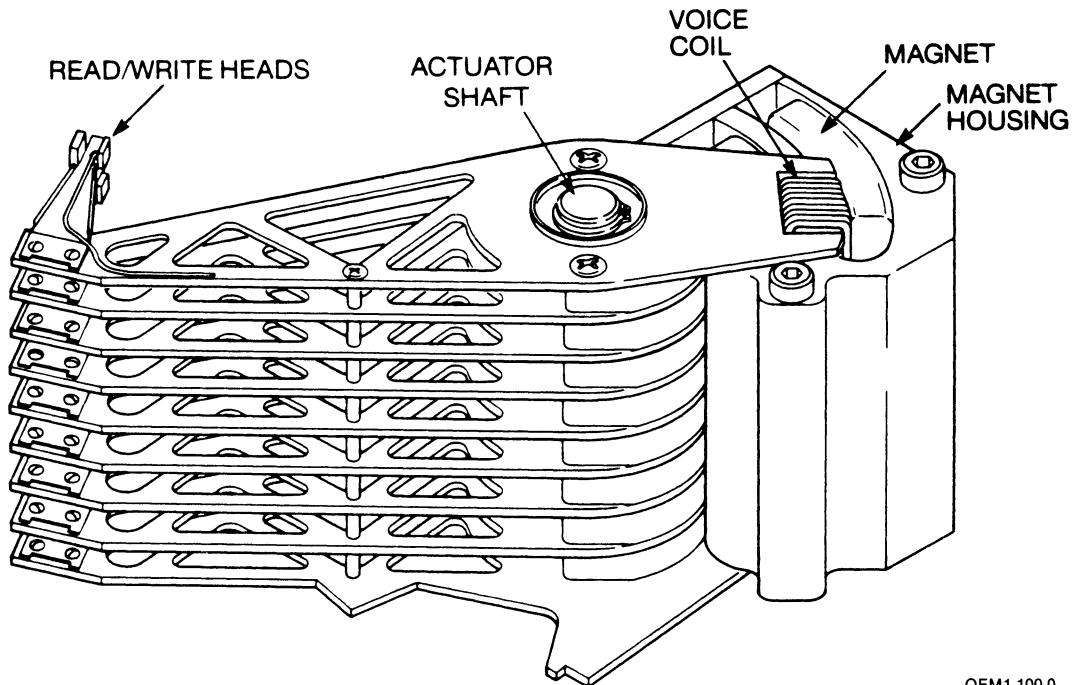

OEM1-100-0

**FIGURE 2**  
**XT-1000 HEAD POSITIONING SYSTEM**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 2.6 Read/Write Heads and Disks

The XT-1000 employs composite manganese-zinc ferrite 3380 "Whitney" type head sliders and flexures. The manganese-zinc is used instead of the conventional nickel-zinc formulation to maximize head output and to allow wide bandwidth read/write capability. The Whitney type sliders and flexures provide improved aerodynamic stability, superior head/disk compliance and a higher signal-to-noise ratio.

The XT-1000 media utilizes thin metallic deposited on 130mm diameter aluminum substrates. The coating formulation together with the low load-force/low mass Whitney type heads permits highly reliable contact start/stop operation. The nickel-cobalt metallic film yields high amplitude signals, and very high resolution performance compared to conventional oxide coated media. The metallic media also provides a highly abrasion-resistant surface, decreasing the potential for damage caused by shipping shock and vibration.

Data on each of the data surfaces is read by one read/write head, each of which accesses up to 1024 tracks. There is one surface dedicated to servo information in each drive.

### 2.7 Cooling Requirements


To insure reliable operation, it is recommended that airflow of at least 3 CFM be provided across the disk drive and printed circuit board assembly in the final installation configuration.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 3.0 FUNCTIONAL OPERATIONS

#### 3.1 Power-Up Sequencing

DC power (+5V and +12V) may be supplied to the drive in any order, but +12VDC is required to start the spindle motor. When the spindle reaches full speed, the actuator lock automatically disengages and the heads then recalibrate to track 0. **NOTE:** Audible noise during the recalibration sequence is normal. Step pulses received during the recalibration sequence will be ignored. Upon a successful recalibrate, TRACK 0, READY, and SEEK COMPLETE status signals will be true. The unit will not perform any Read/Write or Seek functions until READY is true. (If after starting, 1000 rpm is not reached in 10 seconds, an automatic shutdown procedure is initiated; power to the spindle motor is shut off and the drive will not come READY.)

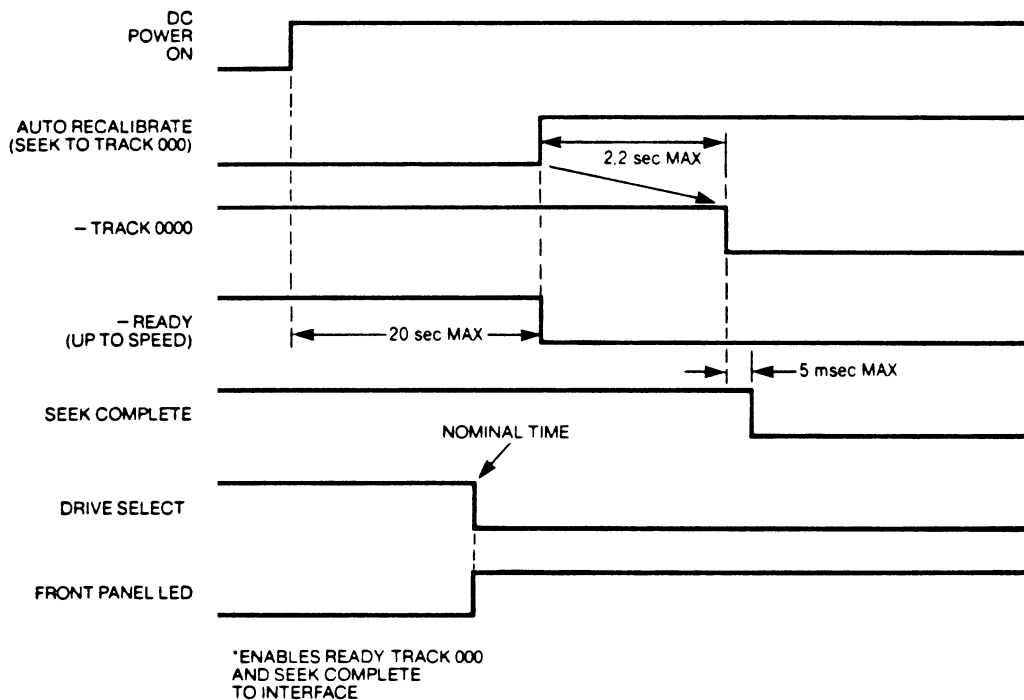

OEM1-101-0

**FIGURE 3  
POWER-UP SEQUENCE**

#### 3.2 Drive Selection

Drive selection occurs when one of the DRIVE SELECT lines is activated from the controller. Only the selected drive will respond to the input signals, and only that drive's output signals are then gated to the controller.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 3.3 Track Accessing

Read/Write head positioning is accomplished by:

- a) Deactivating WRITE GATE.
- b) Activating the appropriate DRIVE SELECT line.
- c) Being in the READY condition with SEEK COMPLETE true.
- d) Selecting the appropriate direction
- e) Pulsing the STEP line

Each STEP pulse will cause the heads to position either 1 track in or 1 track out depending on the level of the DIRECTION line. A low level on the DIRECTION line will cause a seek inward toward the spindle; a high level will cause a seek outward toward track 0.

All seeks performed by the XT-1000 are "buffered" type seeks. Optimal seek times are dependent upon the drive receiving STEP pulses at a rate greater than one pulse every 13 usec; STEP pulses slower than this causes average access times to degenerate per Table 1.

STEP TIME ( $\mu$ sec)	AVERAGE ACCESS TIME (msec)	MAXIMUM ACCESS TIME (msec)
1-13	27	46
14-26	37	75
30	45	85
35	47	90
40	48	95
45	48	102
50	50	110
60	52	122
70	58	128
80	60	134
90	62	142
100	65	142
150	83	210
200	100	263
300	140	383
400	180	503
500	220	623
600	260	745
700	300	865
800	340	990
900	380	1110
1000	420	1235

TIME BETWEEN STEP PULSES CANNOT EXCEED 31 msec

ALL SEEK TIMES INCLUDE SETTLING, AND BEGIN  
UPON RECEPTION OF THE FIRST STEP PULSE

XT-2000      1224 CYLINDERS

**TABLE 1**  
**SEEK PERFORMANCE VS STEP TIME**  
**XT-1140**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 3.4 Head Selection

Any of the drive's data heads can be selected by placing the head's binary address on the four HEAD SELECT lines.

### 3.5 Read Operation

Reading data from the disk is accomplished by:

- a) Deactivating the WRITE GATE line.
- b) Activating the appropriate DRIVE SELECT line.
- c) Assuring the drive is READY
- d) Selecting the appropriate head.

### 3.6 Write Operation

Writing data on to the disk is accomplished by:

- a) Activating the appropriate DRIVE SELECT line.
- b) Assuring that the drive is READY.
- c) Selecting the proper head.
- d) Insuring no Write Fault conditions exist.
- e) Activating Write Gate and placing data on the WRITE DATA line.

## 4.0 ELECTRICAL INTERFACE


The interface to the XT-1000 can be divided into three categories, each of which is physically separated.

1. Control signals.
2. Data signals
3. DC power.

All control lines are digital in nature (open collector TTL) and either provide signals to the drive (input) or signals to the host (output) via interface connection J1/P1. The data transfer signals are differential in nature and provide data either to (write) or from (read) the drive via J2/P2 (defined by EIA RS-422).

Figures 4 and 5 and Tables 2 and 3 show connector pin assignments and interconnection of cabling between the host controller and drives.

# **XT-1000 OEM MANUAL & PRODUCT SPECIFICATION**

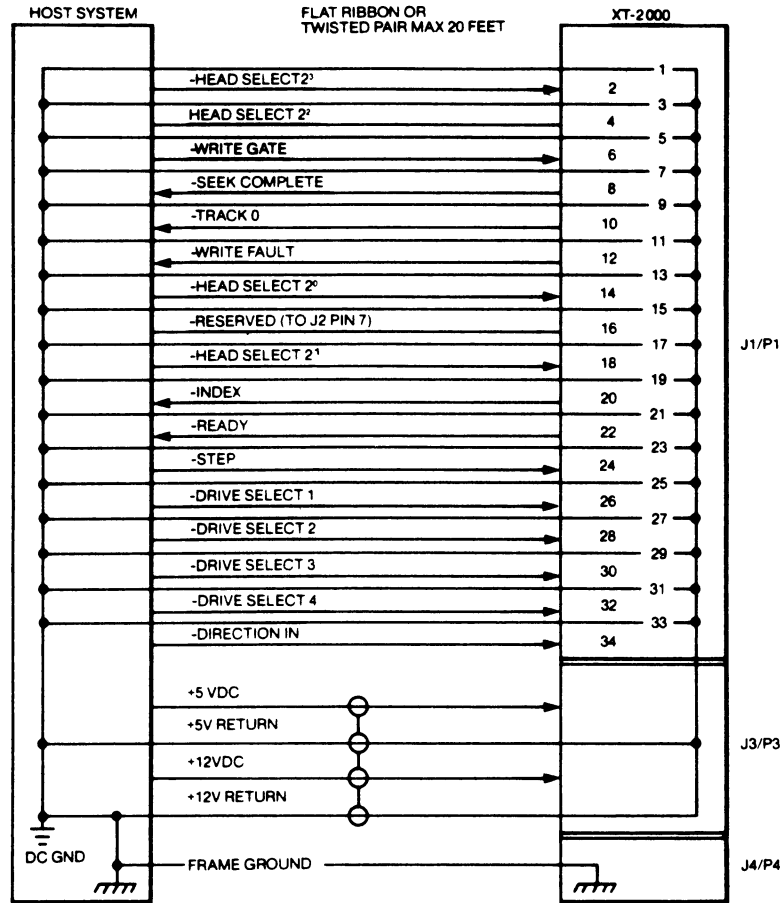


OEM1-102-0

**FIGURE 4**  
**J1/P1—CONNECTOR PIN ASSIGNMENT**

GND RTN PIN	SIGNAL PIN	SIGNAL NAME
1	2	—HEAD SELECT 2 <sup>3</sup>
3	4	—HEAD SELECT 2 <sup>2</sup>
5	6	—WRITE GATE
7	8	—SEEK COMPLETE
9	10	—TRACK 0
11	12	—WRITE FAULT
13	14	—HEAD SELECT 2 <sup>0</sup>
15	16	RESERVED (TO J1 PIN 7)
17	18	—HEAD SELECT 2 <sup>1</sup>
19	20	—INDEX
21	22	—READY
23	24	—STEP
25	26	—DRIVE SELECT 1
27	28	—DRIVE SELECT 2
29	30	—DRIVE SELECT 3
31	32	—DRIVE SELECT 4
33	34	—DIRECTION IN

**TABLE 2**  
**CONTROL SIGNALS**  
**(DAISY CHAINED)**

# **XT-1000 OEM MANUAL & PRODUCT SPECIFICATION**

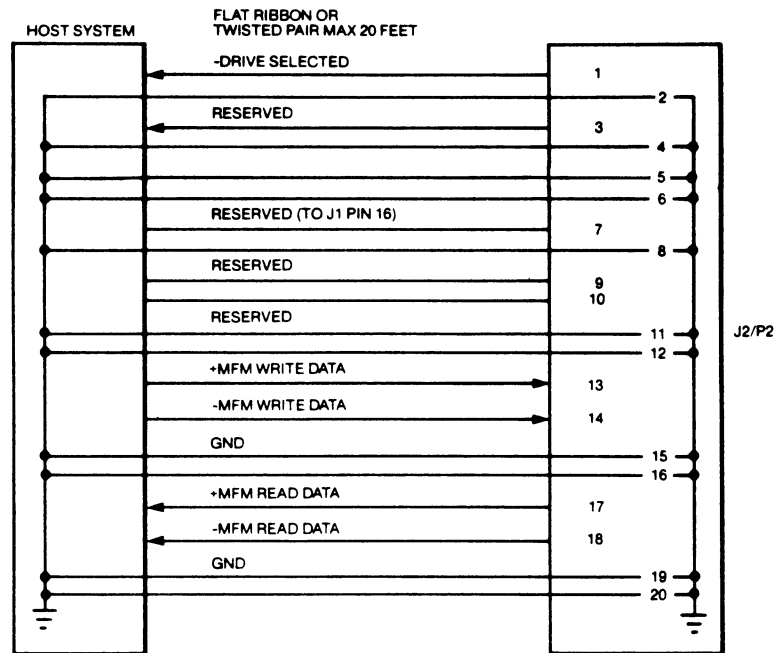

OEM1-103 -1


**FIGURE 5**  
**J2/P2 — CONNECTOR PIN ASSIGNMENT**

GND RTN PIN	SIGNAL PIN	SIGNAL NAME
2	1	—DRIVE SELECTED
4	3	RESERVED
6	5	RESERVED
8	7	RESERVED (TO J1 PIN 16)
	9 10	RESERVED
12	11	GND
	13	+MFM WRITE DATA
	14	—MFM WRITE DATA
16	15	GND
	17	+MFM READ DATA
	18	—MFM READ DATA
20	19	GND

**TABLE 3**  
**DATA SIGNALS**  
**(RADIAL)**



XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

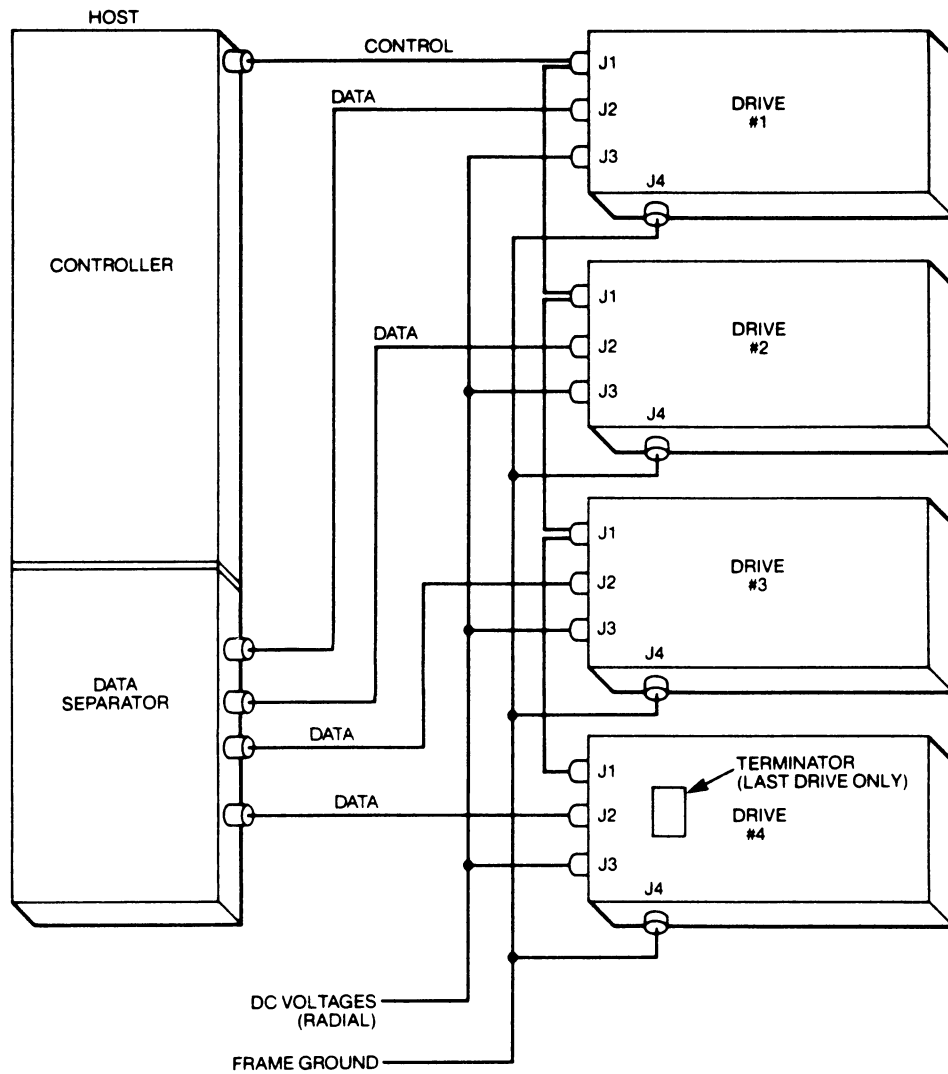

OEM1-104-0

**FIGURE 6**  
**TYPICAL CONNECTION, FOUR DRIVE SYSTEM**


#### 4.1 Control Input Lines

The control input signals are of two types: those to be multiplexed in a multiple drive system and those intended to do the multiplexing. The control input signals to be multiplexed are WRITE GATE, HEAD SELECT 2<sup>0</sup>, HEAD SELECT 2<sup>1</sup>, HEAD SELECT 2<sup>2</sup>, HEAD SELECT 2<sup>3</sup>, STEP and DIRECTION IN. The signal to do the multiplexing is DRIVE SELECT 1, DRIVE SELECT 2, DRIVE SELECT 3, or DRIVE SELECT 4.

The input lines have the following electrical specifications. Refer to Figure 6 for the recommended circuit.

TRUE: 0.0 VDC to 0.4 VDC @ 1= -48mA (Max)

FALSE: 2.5 VDC to 5.25 VDC @ 0= +250 uA (Open Collector)

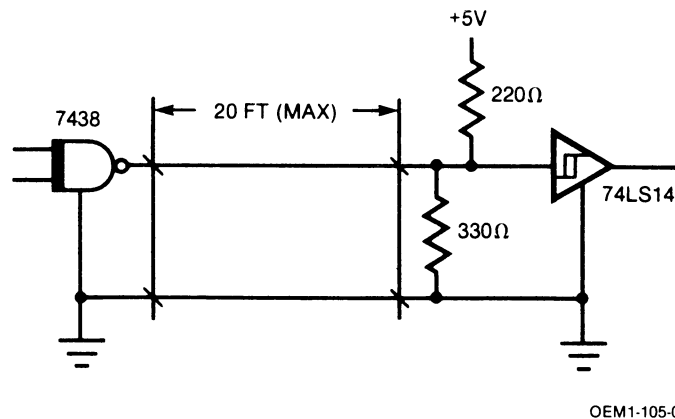

**FIGURE 7**  
**CONTROL SIGNALS DRIVER/RECEIVER COMBINATION**

##### 4.1.1 Reduced Write Current

This function is automatically performed by the drive microprocessor.

#### 4.1.2 Write Gate

The active state of this signal, or low level, enables write data to be written on the disc. The inactive state of this signal, or high level, enables data to be transferred from the drive.

A 220/330 ohm resistor pack allows for termination.

#### 4.1.3 Head Select 2<sup>0</sup>, 2<sup>1</sup>, 2<sup>2</sup>, and 2<sup>3</sup>.

These four lines allow selection of each individual read/ write head in a binary coded sequence. HEAD SELECT 2<sup>0</sup> is the least significant line. Heads are numbered 0 through 15. When all HEAD SELECT lines are high (inactive), head 0 will be selected.

Addressing more heads than contained in the drive will result in a write fault when attempting to perform a write operation.

A 220/330 ohm resistor pack allows for line termination.

#### 4.1.4 Direction In

This signal defines the direction of motion of the R/W heads when the STEP line is pulsed. An open circuit or high level defines the direction as "out" and if a pulse is applied to the STEP line, the R/W heads will move away from the center of the disk. If this line is a low level, the direction of motion is defined as "in" and the R/W heads will move toward the center of the disk. A change in direction must meet the requirement shown in Figure 8.

A 220/330 ohm resistor pack allows for line termination.

NOTE: DIRECTION must not change during step time.

#### 4.1.5 Step

This interface line is a control signal which causes the Read/Write heads to move in the direction of motion defined by the DIRECTION LINE.


The access motion is initiated at the low to high level transition or trailing edge of the signal pulse. Any change in the DIRECTION line must be made at least 100 nsec before the leading edge of the step pulse. (refer to Figure 8A for general timing requirements).

A 220/330 resistor pack allows for line termination.

#### 4.1.6 Buffered Seek


Microprocessor utilization on the XT-1000 adds the capability of capturing and storing up to 1023 step pulses for optimal seeking capability. Optimum seek times require that the time between step pulses be less than 13  $\mu\text{sec}$ ; however, any time up to 3100  $\mu\text{sec}$  will be accepted by the drive.

Note: When performing a recalibrate function on the XT-1000/2000 drives, the step pulses must not be issued at a rate faster than 2 ms. per step pulse. If pulses are issued at a faster rate, the actuator could be driven into the crash stop at high velocity possibly resulting in damage to the drive. The recommended recal method is to issue an out DIRECTION, a STEP pulse, wait for SEEK COMPLETE and then test for TRACK 0.

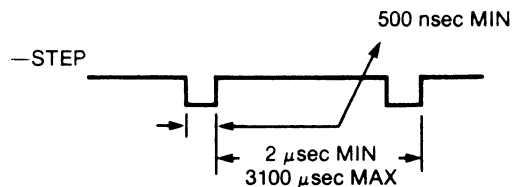

OEM1-106 -1

**FIGURE 8A  
STEP PULSE TIMING**

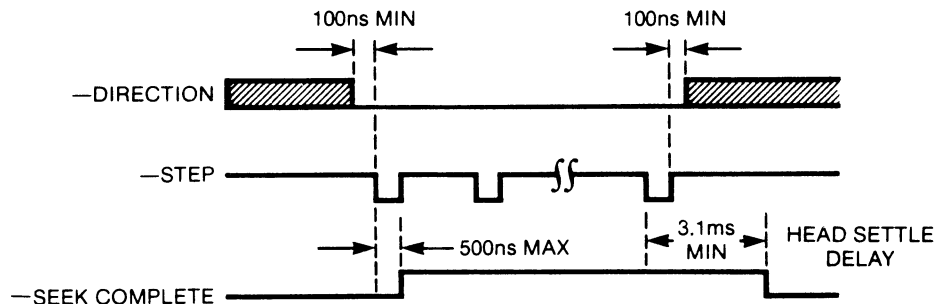

OEM1-107-0

**FIGURE 8B  
GENERAL STEP TIMING**

#### 4.1.7 Drive Select

DRIVE SELECT, when low, connects the drive interface to the control lines. Positioning the DRIVE SELECT Jumper between the two appropriate pins on the drive printed circuit board determines which drive will be selected. Figure 21 and Table 5 indicate which drive will be selected for each Jumper position.

#### 4.2 Control Output Lines

The output control signals are driven with an open collector output stage capable of sinking a maximum of 48mA at low level or true state with maximum voltage of 0.4V measured at the driver. When the line driver is in the high level or false state, the driver transistor is off and collector leakage current is a maximum of 250uA.

All J1 output lines are enabled by their respective DRIVE SELECT line.

Figure 7 shows the recommended circuit.

##### 4.2.1 Seek Complete

This line will go to a low level or true state when the Read/Write heads have settled on the final track at the end of a seek. Reading or writing should not be attempted when seek complete is false.

SEEK COMPLETE will go false in three cases:

- 1) A recalibration sequence is initiated (by drive logic) at power on, if the R/W heads are not over track zero.
- 2) 500 nsec (max) after the leading edge of a step pulse or series of step pulses.
- 3) If +5 volts or +12 volts are lost momentarily but restored.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 4.2.2 Track 0

This interface signal indicates a low level or true state only when the drive's Read/Write heads are positioned at cylinder zero (the outermost data track).

### 4.2.3 Write Fault

This signal is used to indicate a condition at the drive that may cause improper writing on the disk. When this line is a low level or true, further writing and stepping is inhibited at the drive until the condition is corrected. Write fault can be reset by deselecting the drive.


Note: controller should edge detect this signal.

There are three conditions detected:

- a) Write current in a head without WRITE GATE active or no write current with WRITE GATE active and DRIVE SELECTED.
- b) Multiple heads selected, no head selected, or improperly selected.
- c) Head not properly positioned over track (OFF-TRACK detected).

### 4.2.4 Index

This interface signal is provided by the drive once each revolution (16.67 ms nominal) to indicate the beginning of a track. Normally, this signal is high and makes the transition to low to indicate INDEX. Only the transition from high to low is valid.

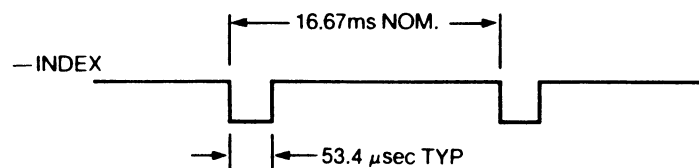

OEM1-108-0

**FIGURE 9  
INDEX TIMING**

#### 4.2.5 Ready


This interface signal when true together with SEEK COMPLETE, indicates that the drive is ready to read, write or seek, and that the I/O signals are valid. When the line is false, all writing and seeking is inhibited.

The typical time after power on for READY to be true is 15 seconds.

#### 4.3 DATA TRANSFER LINES

All lines associated with the transfer of data between the drive and the host system are differential in nature and may not be multiplexed. These lines are provided at the J2/P2 connectors on all drives.

Two pair of balanced signals are used for the transfer of data: WRITE DATA and READ DATA. Figure 10 illustrates the driver/receiver combination used in the drive for data transfer signals.

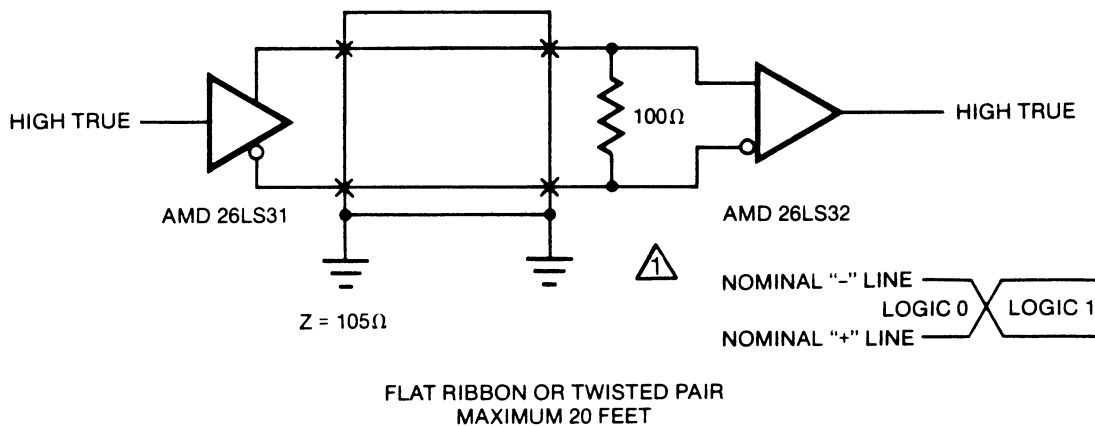

NOTE: Any EIA RS 422 Driver/receiver pair will interface.

OEM1-109-0

**FIGURE 10  
DATA LINE DRIVER/RECEIVER COMBINATION**

#### 4.3.1 MFM Write Data

This is a differential pair that defines the transitions to be written on the track. The transition of +MFM WRITE DATA line going more positive than the - MFM WRITE DATA will cause a flux reversal on the track provided WRITE GATE is active. This signal must be driven to an inactive state (+ MFM WRITE DATA more negative than - MFM WRITE DATA) by the host system when in a read mode.


No write precompensation is required by the drive; if write precompensation is used, some loss in performance (window margin within the data separator) may result.

#### 4.3.2 MFM Read Data

The data recovered by reading a pre-recorded track is transmitted to the host system via the differential pair of MFM READ DATA lines. The transition of the + MFM READ DATA line going more positive than the MFM READ DATA line represents a flux reversal on the track of the selected head.

#### 4.3.3 Read/Write Timing

The timing diagram as shown in Figure 12 depicts the necessary sequence of events (with associated timing restrictions for proper read/write operation of the drive).

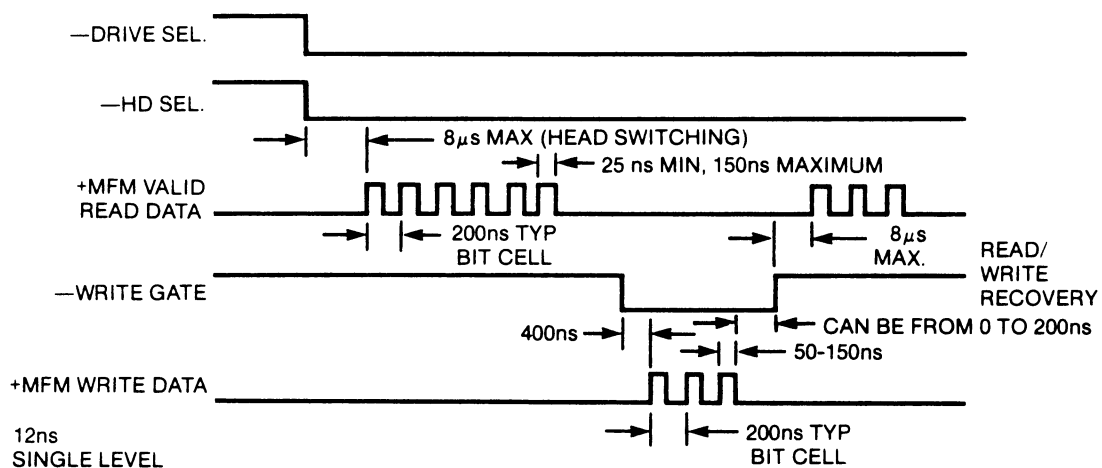

OEM1-110-0

**FIGURE 11  
READ/WRITE DATA TIMINGS**



#### 4.4 Drive Selected


A status line is provided at the J2/P2 connector to inform the host system of the selection status of the drive.

The DRIVE SELECTED line is driven by a TTL open collector driver as shown in Figure 7. This signal will go active only when the drive is programmed as drive n (n= 1,2,3, or 4) by the drive. The DRIVE SELECT N line at J1/PI is activated by the host system.

#### 4.5 General Timing Requirements

Figure 12 is a timing diagram showing the necessary sequence of events and associated timing restrictions for proper operation of the drive.

Note that an automatic recalibration to track 0 occurs during the DC power-on sequence. At DC power off, the disks are brought to a complete stop in approximately 20 seconds.

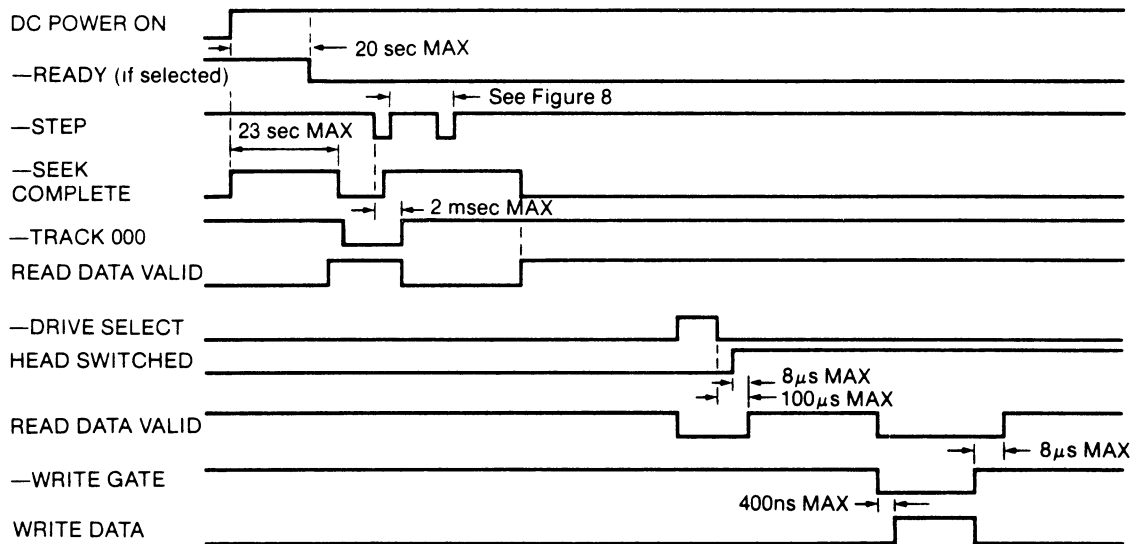

OEM1-111 -1


**FIGURE 12  
GENERAL TIMING REQUIREMENTS**

## 5.0 PHYSICAL INTERFACE

The electrical interface between the XT-1000 and the host controller is via four connectors:

1. J1 - Control signals (multiplexed)
2. J2 - Read/write signals (radial)
3. J3 - DC power input
4. J4 - Frame ground

Refer to Figure 13 for connector locations.

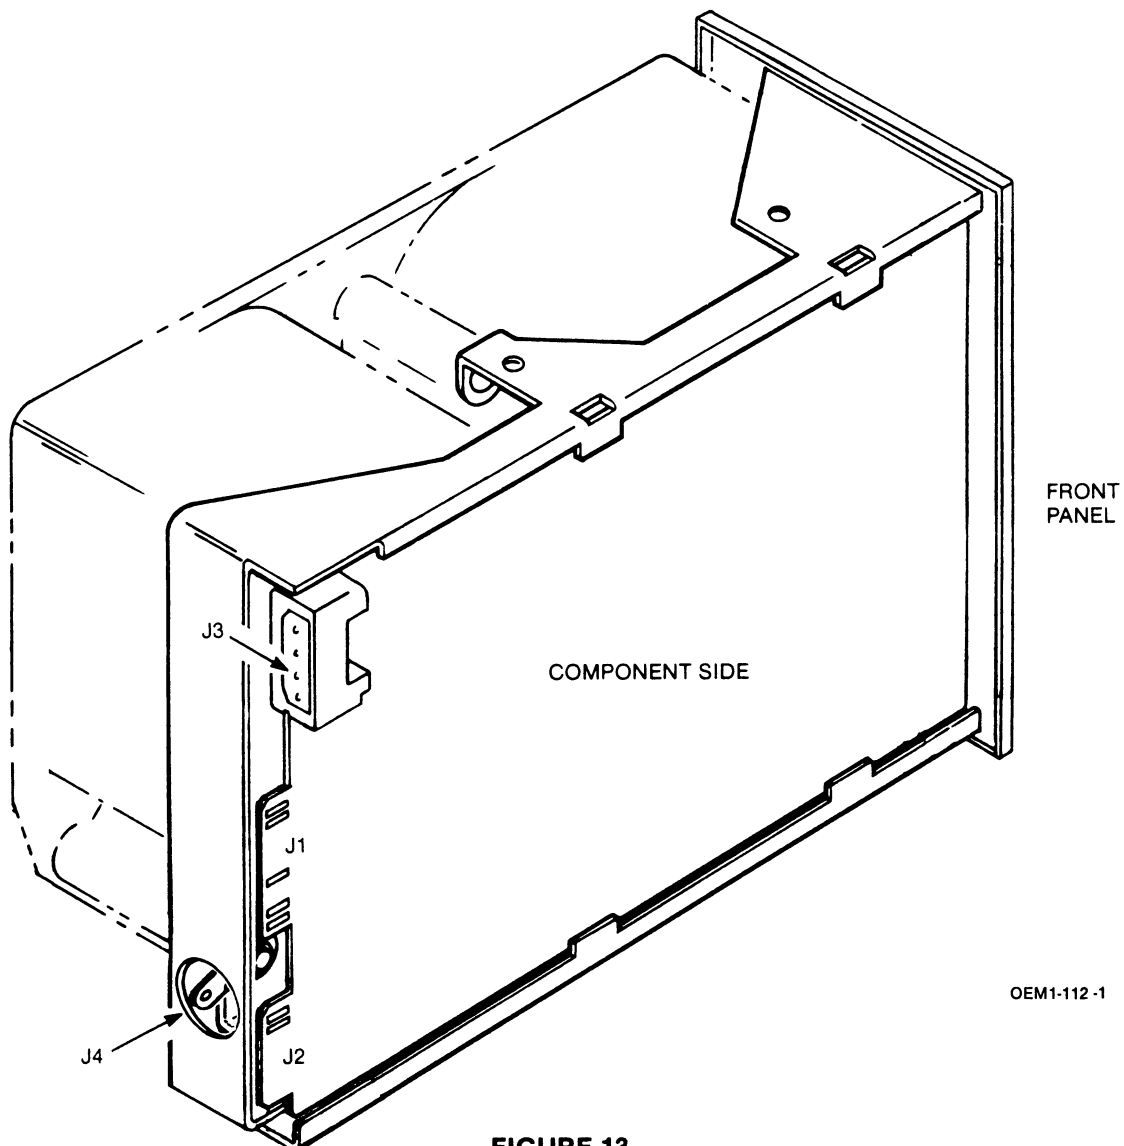


**FIGURE 13**  
**INTERFACE CONNECTOR PHYSICAL LOCATION**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 5.1 J1/P1 CONNECTOR


Connection to J1 is via a 34 pin PCB edge connector. The dimensions for this connector are shown in figure 14. The pins are numbered 1 through 34 with the even pins located on the component side of the PCB. Pin 2 is located on the end of the PCB connector closest to the DC power connector J3/P3. A key slot is provided between pins 4 and 6. The recommended mating connector for P1 is AMP ribbon connector P/N 88373-3.

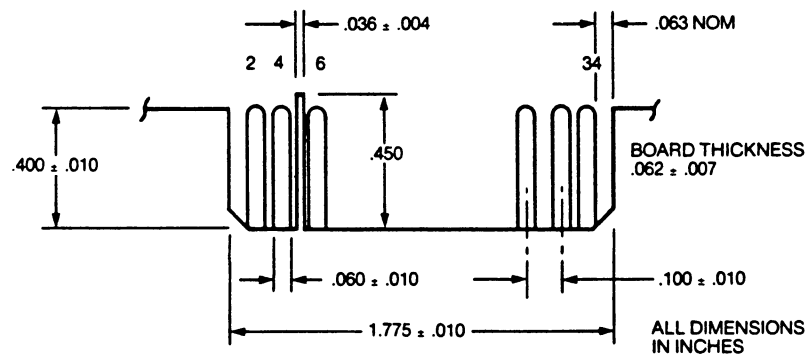

**FIGURE 14**  
**J1 CONNECTOR DIMENSIONS**

### 5.2 J2/P2 CONNECTOR

Connection of J2 is via a 20 pin PCB edge connector. The dimensions for the connector is shown in figure 15. The pins are numbered 1 through 20 with the even pins located on the component side of the PCB. The recommended mating connector for P2 is AMP ribbon connector P/N 88373-6. A key slot is provided between pins 4 and 6.

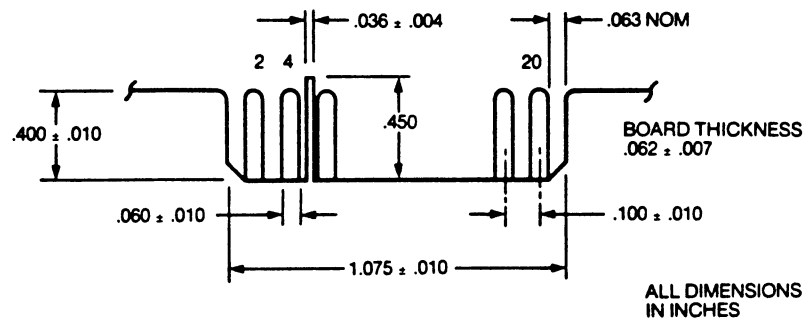


**FIGURE 15**  
**J2 CONNECTOR DIMENSIONS**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 5.3 J3/P3 CONNECTOR


The DC power connector (J3), Figure 16, is a 4 pin AMP MATE-N-LOCK connector P/N 350543-1 mounted on the solder side of the PCB. The recommended mating connector (P3) is AMP P/N 1-480424-0 utilizing AMP pins P/N 350078-4 (strip) or P/N 61173-4 (loose piece). J3 pins are numbered as shown in Figure 16.

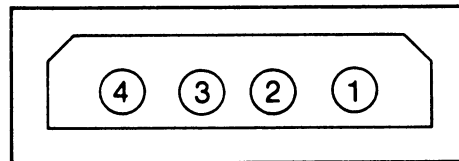

OEM1-115-0

**FIGURE 16**  
**J3 CONNECTOR (DRIVE PCB SOLDER SIDE)**

The required voltages and current levels on connector J3/P3 are shown below.

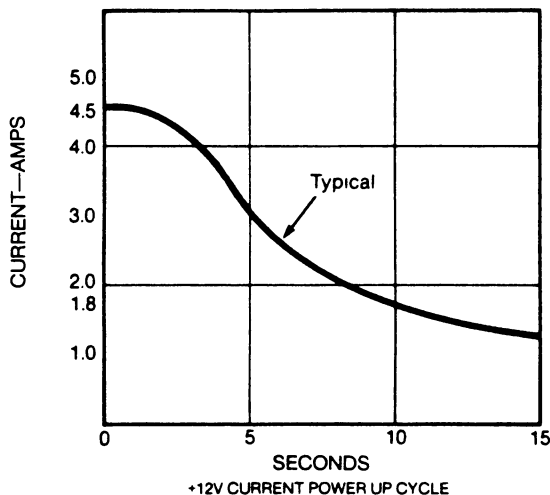

OEM1-116-0

NOTE: IF A FULL LENGTH SEEK IS DONE AN ADDITIONAL ONE AMPERE IS REQUIRED FOR A DURATION OF 15 MILLISECONDS.

**FIGURE 17**  
**MOTOR START CURRENT REQUIREMENTS**

J3 CONNECTOR	
PIN 4	+5 VOLTS DC $\pm$ 5%
PIN 3	+5 VOLT RETURN
PIN 1	+12 VOLTS DC $\pm$ 5%*
PIN 2	+12 VOLT RETURN

\*  $\pm$  10% AT POWER ON OR SEEKING

OEM1-117-1

**TABLE 4**  
**DC POWER REQUIREMENTS**

### 5.4 J4/P4 Frame Ground Connector

The frame ground connection is a Faston type connection, AMP P/N 61761-2. The recommended mating connector is AMP 62187-1. If wire is used, the hole in J4 will accommodate a wire size of 18AWG maximum.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 6.0 PHYSICAL SPECIFICATIONS

This section describes the mechanical and mounting recommendations for the XT-1000.

#### 6.1 Mounting Orientation

The XT-1000 may be mounted in any orientation. In any final mounting configuration, insure that the operation of the three shock mounts which isolate the base casting from the frame is not restricted.

#### 6.2 Mounting Holes

Eight mounting holes, four on the bottom and two on each side are provided for mounting the drive into an enclosure. The size and location of these holes, shown in figure 18, are identical to industry standard minifloppy drives.

```
*****
*                                     *
*                               CAUTION *
*                                     *
* The casting is very close to the frame mounting holes in some *
* locations. Mounting screw lengths must be chosen such that no more *
* than .125" of the screw is available to enter the frame mounting hole. *
* The torque applied to the mounting screws should be at least 9 inch- *
* pounds but to avoid stripping the threads, the maximum torque applied *
* shall not exceed 12 inch-pounds. *
*****
```


#### 6.3 Physical Dimensions

Overall height, width, and depth along with other key dimensions are shown in Figures 18 and 19. As in the case of the mounting holes, the dimensions are identical to the industry standard minifloppy drives, thus allowing a direct physical replacement.

#### 6.4 Shipping Requirements

At powerdown, the heads are automatically positioned over the non-data, dedicated landing zone on each disk surface. The automatic shipping lock solenoid is also engaged at this time.


**XT-1000 OEM MANUAL & PRODUCT SPECIFICATION**

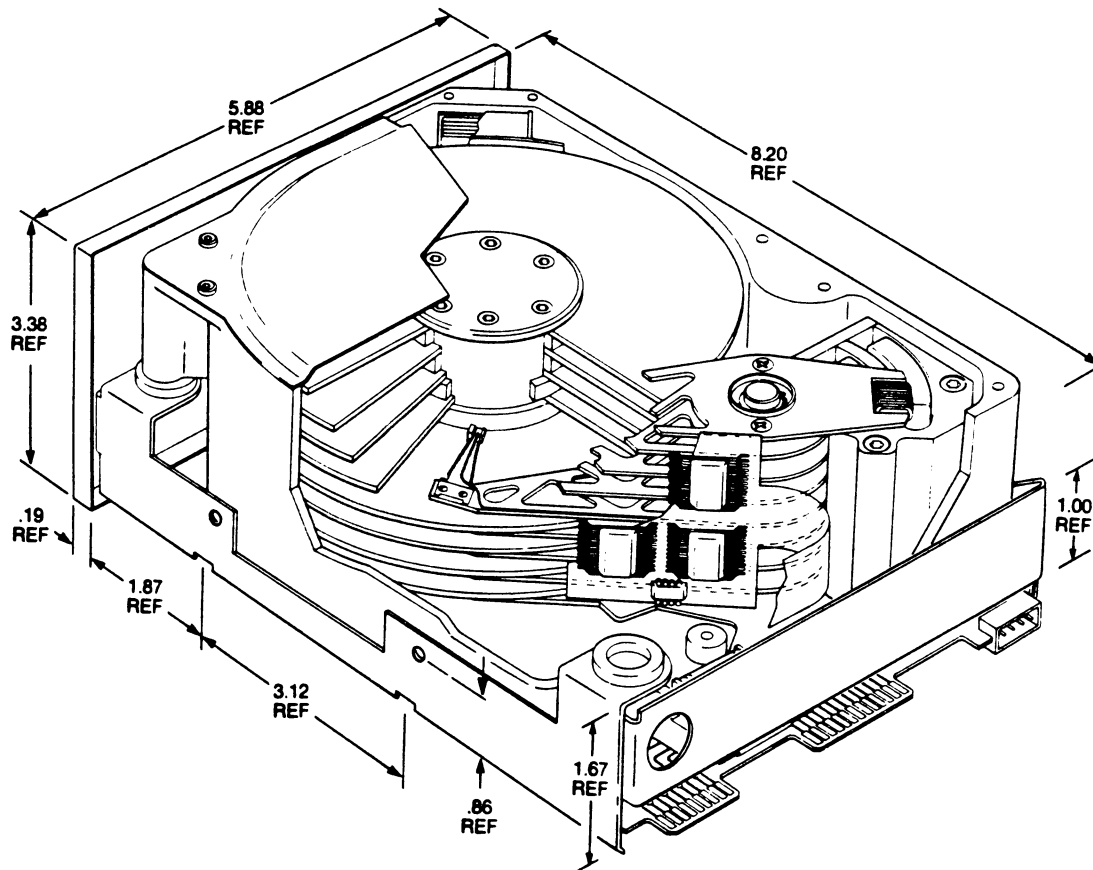

OEM1-118 -1

**FIGURE 18  
XT-1000 MECHANICAL OUTLINE  
AND  
MOUNTING HOLE LOCATION**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

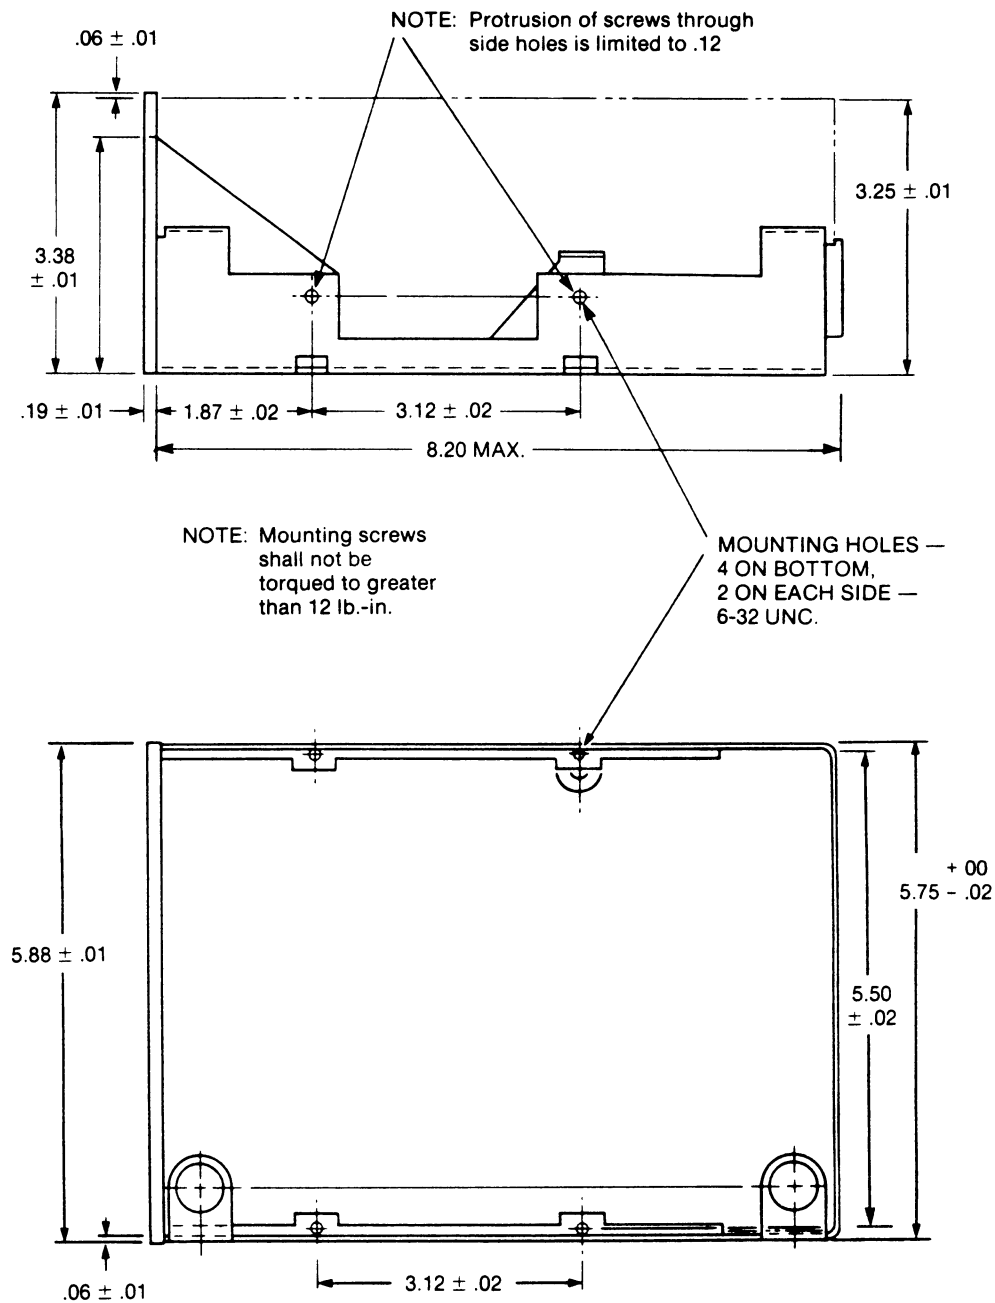

ALL DIMENSIONS IN INCHES.

OEM1-119 -1

**FIGURE 19**  
**XT-1000 MECHANICAL OUTLINE**  
**BOTTOM AND SIDE VIEWS**

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 7.0 MEDIA DEFECTS AND ERRORS

Defects on the media surface will be identified on a defect map provided with each drive. This defect map will indicate the head number, track number, and number of bytes from index for each defect.

The maximum allowable number of defects per drive shall not exceed an average of ten (10) per disk surface. Cylinder 0 is certified to be defect-free.

The maximum number of defects per drive is listed below:

Model	# of Disks	# of Data Surfaces	Maximum # of Defects
XT-1065	4	7	70
XT-1085	5	8	80
XT-1105	6	11	110
XT-1140	8	15	150

In addition, the following limit will also be met:

The maximum number of defects per surface shall not exceed thirty (30).

```
*****
* Warning: The defect map attached *
* to the cover of each drive should *
* be removed before operating.      *
*****
```



## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 7.1 Defect Map Format (for maps written on drives)


The format Maxtor uses for the defect maps written on the drive is as follows:

- 1) The format of the defect map information is as shown in Figure 20.
- 2) The defect map is written on the drive using an Adaptec controller format.
- 3) The defect map is written on all sectors of cylinder 0, maximum cylinder -8, maximum cylinder and maximum cylinder +1.

For clarification, the applicable cylinder numbers of XT-1000 drives are listed below:

Product	Maximum Cylinder - 8	Maximum Cylinder	Maximum Cylinder + 1
XT-1065	909	917	918
XT-1085	1015	1023	1024
XT-1105	909	917	918
XT-1140	909	917	918

# **XT-1000 OEM MANUAL & PRODUCT SPECIFICATION**

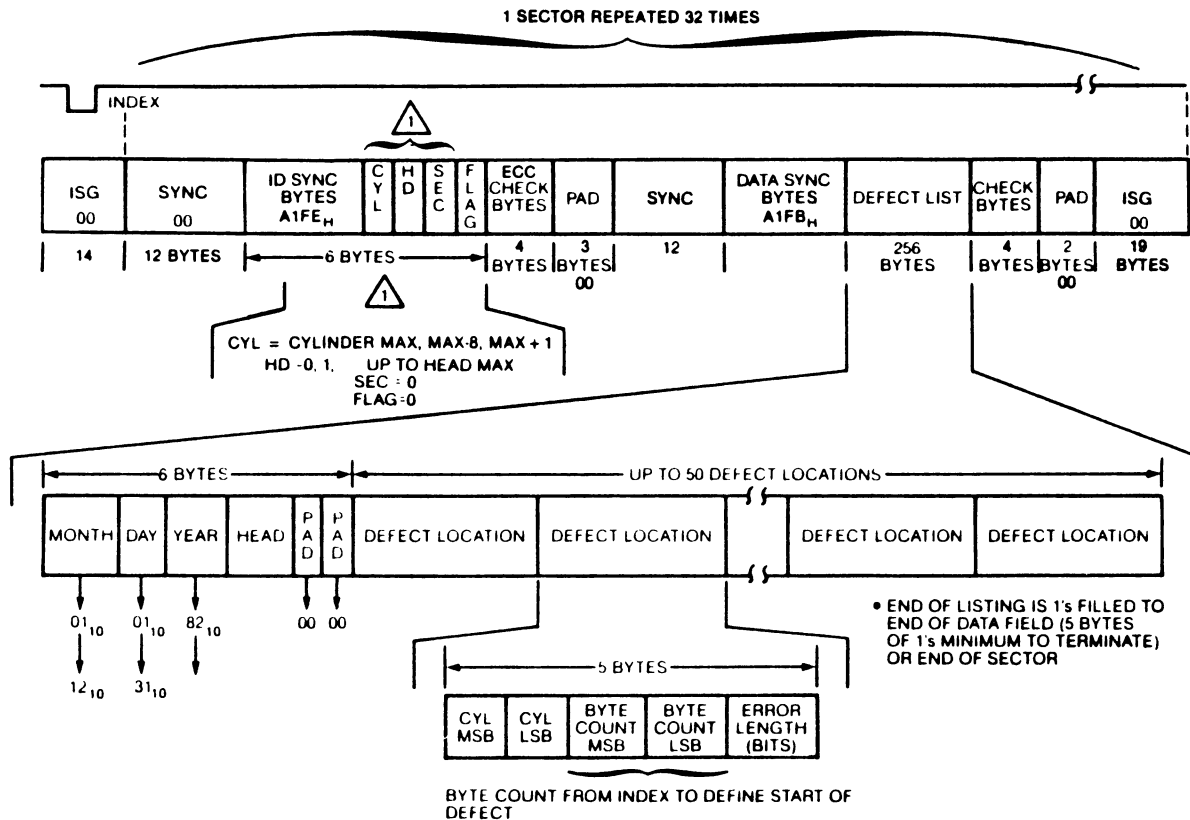

1 CYL, HD, AND SEC BYTES ARE COMBINED AND UTILIZED FOR LOGICAL SECTOR ADDRESS (ADAPTEC FORMAT)

OEM1-124-0

**FIGURE 20  
DEFECT MAP FORMAT**

The disk drives defect map information resides on each sector of Cylinder 0, Maximum Cylinder -8, Maximum Cylinder, and Maximum Cylinder +1, as allowed by the Adaptec format.

The defects for each surface are written on that surface.

The format for the data field portion of each sector is 256 bytes.

Defect locations are 5 bytes long and the bytes are defined above.


The end of the defect list for each surface is indicated by 5 bytes of ones in the defect location field or the end of the sector.

The Byte count is the number of bytes from INDEX.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 8.0 XT-1000 DRIVE ADDRESS SELECTION JUMPER

In multiple drive configurations, it is necessary to configure each drive (maximum of 4 per host controller) with a unique address. This is accomplished by locating the jumper plug over the correct pins as indicated in Figure 21 and Table 5. The standard drive is shipped as Drive 1.

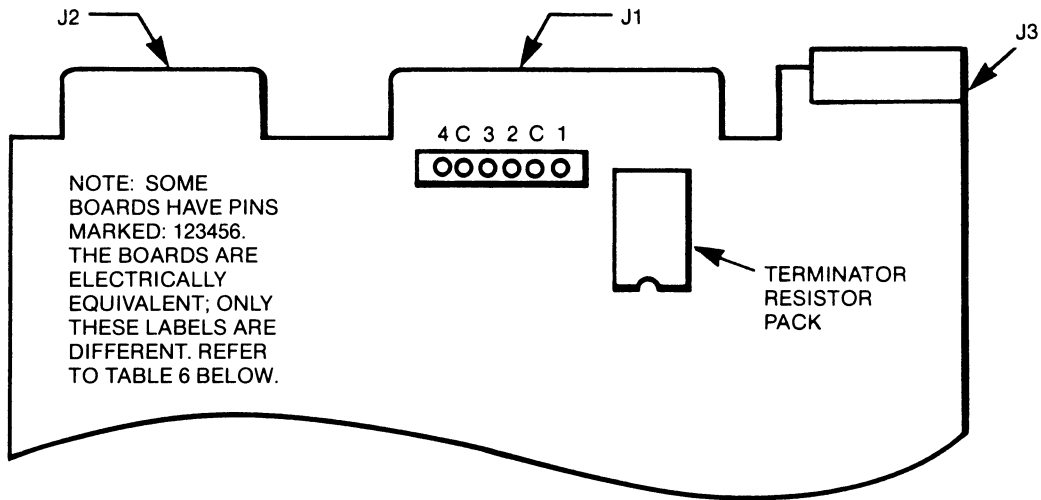

**FIGURE 21  
DRIVE SELECT JUMPER OPTIONS**

BOARD LABEL	4C32C1	123456
FUNCTION	JUMPER BLOCK PIN NUMBERS	JUMPER BLOCK PIN NUMBERS
Drive Select 0	1.C	5,6
Drive Select 1	2.C	4,5
Drive Select 2	3.C	2,3
Drive Select 3	4.C	1,2

OEM1-120-1

**TABLE 5  
DRIVE SELECT JUMPER OPTIONS**

**9.0 APPENDIX**


**9.1 Track Format**

The purpose of a format is to organize a data track into smaller sequentially numbered blocks of data called sectors.

**9.2 ST506/412 Format**

The format shown below in Figure 22, the ST506/412 format, is a format commonly used on lower performance disk drives. Its efficiency of 81% (unformatted capacity/formatted capacity) is typical; however other efficiencies can be obtained by varying the number of sectors per track. The ST506/412 format is a soft sector type of sector which means that the beginning of each sector is defined by a prewritten identification (ID) field which contains the physical sector address plus cylinder and head information. The ID field is then followed by a user supplied data field.

The ST506/412 format is a slightly modified version of the IBM System 34 double density format which is commonly used on floppy disk drives. The encoding method is Modified Frequency Modulation (MFM).

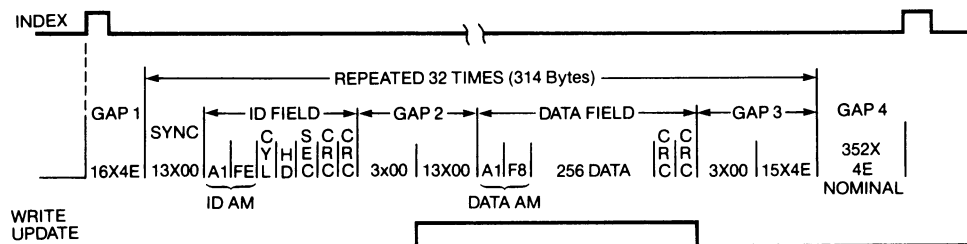


- NOTES:
1. NOMINAL TRACK CAPACITY = 10416 BYTES UNFORMATTED
  2. TOTAL DATA BYTES/TRACK = 256 x 32 = 8,192
  3. SECTOR INTERLEAVE FACTOR IS 4. SEQUENTIAL ID FIELDS ARE SECTOR NUMBERED 0, 8, 16, 24, 1, 9, 17, 25, 2, 10, 18, 26,...ETC
  4. DATA FIELDS CONTAIN THE BIT PATTERN 0000 AS SHIPPED
  5. CRC FIRE CODE =  $x^{16} + x^{12} + x^5 + 1$
  6. BIT 7 OF HEAD BYTE ID FIELD EQUALS 1 IN A DEFECTIVE SECTOR (CYLINDER 0 IS ERROR FREE)
  7. BIT 6 OF HEAD BYTE IS CYLINDER  $2^8$  BIT
  8. BIT 5 OF HEAD BYTE IS CYLINDER  $2^9$  BIT
  9. BIT 4 OF HEAD BYTE IS RESERVED FOR CYLINDER  $2^{10}$  BIT
  10. BIT 0-3 OF HEAD BYTE ARE HEAD  $2^0$  TO HEAD  $2^3$  RESPECTIVELY

**FIGURE 22  
ST506/412 FORMAT**

### 9.3 XT-1000 Alternate Track Format

Figure 23 shows an alternate format available on the XT-1000. This format is similar to the ST506/412 format with the exception that it contains 33 sectors per track instead of 32. The additional sector is available because the XT-1000 maintains a tighter tolerance on rotational speed (3600 rpm +0%, -0.2%) than comparable drives, hence a smaller Gap 4 can be allowed. A total of 8448 bytes are available, each having 256 bytes of user data.

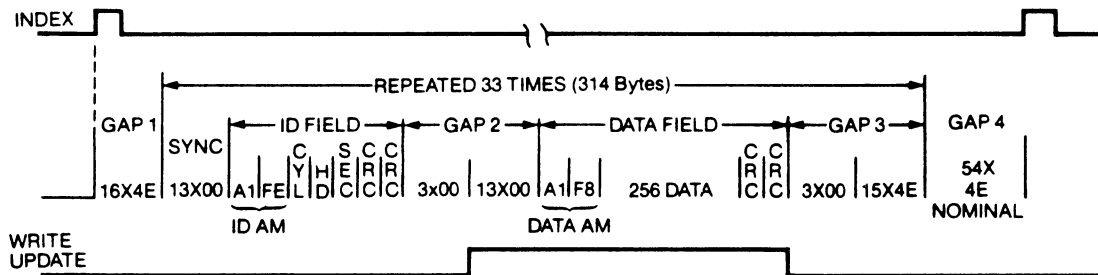

- NOTES:
1. NOMINAL TRACK CAPACITY = 10416 BYTES UNFORMATTED
  2. TOTAL DATA BYTES/TRACK = 256 x 33 = 8,448
  3. DATA FIELDS CONTAIN THE BIT PATTERN 0000 AS SHIPPED
  4. CRC FIRE CODE =  $x^{16} + x^{12} + x^5 + 1$
  5. BIT 7 OF HEAD BYTE ID FIELD EQUALS 1 IN A DEFECTIVE SECTOR (CYLINDER 0 IS ERROR FREE)
  6. BIT 6 OF HEAD BYTE IS CYLINDER  $2^8$
  7. BIT 5 OF HEAD BYTE IS CYLINDER  $2^9$  BIT
  8. BIT 4 OF HEAD BYTE IS RESERVED FOR CYLINDER  $2^{10}$  BIT
  9. BIT 0-3 OF HEAD BYTE ARE HEAD  $2^0$  TO HEAD  $2^3$  RESPECTIVELY


OEM1-122-0

**FIGURE 23  
XT-1000 ALTERNATE TRACK FORMAT**

#### 9.4 Address Marks

The beginnings of both the ID field and the data field are flagged by unique characters called address marks. An address mark is two bytes in length. The first byte is an "A1" data pattern. This is followed by either an "FE" pattern for an ID address mark, or an "F8" pattern for the data address mark.

The "A1" pattern is made unique by violating the encoding rules of MFM by omitting one clock bit. This makes the address mark pattern unique to any other serial bit combination that could occur on the track. See figure depiction of the "A1" byte. Each ID and data field is followed by a 16 bit cyclic redundancy check (CRC) character used for a particular data pattern; an error correction code (ECC) may be used instead.

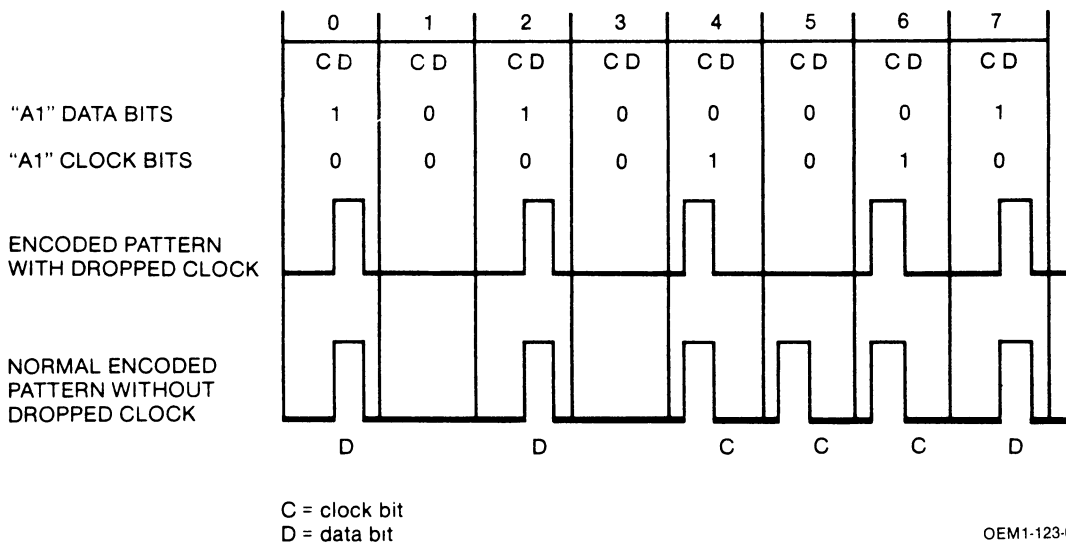

**FIGURE 24**  
**"A1" ADDRESS MARK BYTE**

## 9.5 Gap Length Calculations

Gaps surrounding the ID and data fields establish physical and timing relationships between these fields.

### 9.5.1 Gap 1

Gap 1 is to provide for variations in Index detection. As shipped, gap 1 is 16 bytes long, but must be at least 12 bytes. Gap 1 is immediately followed by a sync field preceeding the first ID field.

### 9.5.2 Gap 2

Gap 2 follows the CRC or ECC bytes of the ID field, and continues to the data field address mark. It provides a known area for the data field write splice to occur. The latter portion of this gap serves as the sync up area for the data field AM. Gap 2 is normally 16 bytes; however, its minimum length is determined by the "lock up" performance of the phase-lock-loop in the data separator, which is part of the host control unit.

### 9.5.3 Gap 3

Gap 3 following each data field allows for the spindle speed variations. This allows for the situation where a track has been formatted while the disk is running slower than nominal, then write updated with the disk running faster than normal. Without this gap, or if it is too small, the sync bytes or ID field of the next field could be overwritten. As shipped, the gap allows for a + 0.5% rotational speed variation. Minimum gap is 8 bytes for a 256 byte record size.

### 9.5.4 Gap 4

Gap 4 is a speed tolerance buffer for the entire track, which is applicable in full track formatting operations to avoid overflow into the index area. The format operation which writes ID fields begins with the first encountered index and continues to the next index. The actual bytes in gap 4 depends on the exact rotational speed during the format operation.

## XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

### 9.6 Sector Interleaving

The ST506/412 format normally uses an interleave factor of 4: that is, sequentially sectored ID numbers are 0, 8, 16, 24, 1, 9, 17, 25, 2, 10, 18, 26, etc. This allows sufficient system turnaround time to process multiple sectors during a single revolution, thus enhancing through-put of typical file read/write operations. Other interleave factors can be used.

### 9.7 Unpacking and Inspection

To be supplied.

### 9.8 Installation

To be supplied.



XT-1000 OEM MANUAL & PRODUCT SPECIFICATION

BLANK

## Your Comments, Please . . .

Your comments assist us in improving the usefulness of our publications and they are an important part of the inputs used in preparing updates to existing publications.

We would appreciate it if you could complete the questionnaire and mail it to us. Feel free to mark more than one box for each question and make any additional comments. If you prefer not to give us your name just leave the last part, name and address, blank. All comments and suggestions become the property of Maxtor.

1. Did you have difficulty in understanding or applying the material presented in this manual?

\_\_\_\_\_None \_\_\_\_\_Minimal Difficulty \_\_\_\_\_Difficulty \_\_\_\_\_Considerable Difficulty

If so:

a. If you had any degree of difficulty, please identify the areas:

b. What do you suggest we do to clarify these areas?

2. How would you rate:

	Excellent	Good	Adequate	Poor
The areas covered	_____	_____	_____	_____
The depth of coverage	_____	_____	_____	_____
The indexing	_____	_____	_____	_____
The organization	_____	_____	_____	_____
The overall manual	_____	_____	_____	_____

Comments:

3. What was your level of knowledge before you started using this manual?

\_\_\_\_\_None \_\_\_\_\_Beginner \_\_\_\_\_Intermediate \_\_\_\_\_Expert

4. What is your major application of the equipment described in this manual?

\_\_\_\_\_ Business Administration  
\_\_\_\_\_ General Computation & Data Analysis  
\_\_\_\_\_ Engineering  
\_\_\_\_\_ What kind? \_\_\_\_\_  
\_\_\_\_\_ Telecommunications  
\_\_\_\_\_ Education  
\_\_\_\_\_ Data Acquisition and Control  
\_\_\_\_\_ Computer Aided Design  
\_\_\_\_\_ Medicine  
\_\_\_\_\_ What kind? \_\_\_\_\_  
\_\_\_\_\_ Other (Please name) \_\_\_\_\_

5. Do you wish to receive information on other Maxtor products?

\_\_\_\_\_ Yes \_\_\_\_\_ No ☐ XT-1000 ☐ XT-2000 ☐ EXT-4000 ☐ Maxtor Corporate Information

General Comments:

Name: \_\_\_\_\_ Title: \_\_\_\_\_

Company Name: \_\_\_\_\_

Address: \_\_\_\_\_

City/State/Zip: \_\_\_\_\_ Phone: (\_\_\_\_) \_\_\_\_\_

Thank you for your help.

**Maxtor**

FOLD

FOLD

PLACE  
POSTAGE  
HERE

**Maxtor Corporation**  
150 River Oaks Parkway  
San Jose, CA 95134

ATTN: John Klonick

FOLD

FOLD

BLANK

The Maxtor logo consists of the word "Maxtor" in a bold, sans-serif font. The letter "x" is stylized with a horizontal line passing through its center, creating a distinctive graphic element.

**Maxtor Corporation**  
150 River Oaks Parkway  
San Jose, CA 95134  
408 942 1700  
Telex 171074